

全A 電流センサ関連 CURRENT SENSORS

磁気比例式 / 貫通型, ノンレシオメトリック出力, Vref-OUT/IN mode, ∆Vout = 800mV@I_{PN} Magnetic Proportion System / Through Type, Non ratiometric output, Vref-OUT/IN mode, ∆Vout = 800mV@I_{PN}

LA37S S05 SERIES



[STANDARDS]

- •UL508
- •CSA C22.2 No.14-18
- •EN 62477-1



絶対最大定格 ABSOLUTE MAXIMUM RATINGS

仕様項目 Parameters	記号 Symbol	単位 Unit	規格値 Value	備考 Comment
電源電圧 Supply voltage	Vcc	V	7.2	
一次導体温度 Primary conductor temperature	_	°C	120	
静電耐圧(HBM : 人体モデル) ESD (HBM : Human Body Model)	V _{ESD}	kV	2	C=100 pF, R=1.5 kΩ

絶縁性能 ISOLATION CHARACTERISTICS

仕様項目 Parameters	記号 Symbol	単位 Unit	規格値 Value	備考 Comment
絶縁耐圧 Insulation voltage	Vd	_	AC3300V, 1分間(感応電流0.5mA) AC3300V, for 1minute(Sensing current 0.5mA)	一次 ⇔ 二次間 Primary ⇔ Secondary
インパルス耐電圧 Impulse withstand voltage	Vw	kV	6.0	一次 ⇔ 二次間 Primary ⇔ Secondary
				入力波形 Input waveform: ·波頭長 Front time 1.2μs ·波尾長 Time to half value 50μs ·一回 single
絶縁抵抗 Insulation resistance	R _{IS}	_	≧ 500MΩ(at DC500V)	一次 ⇔ 二次間 Primary ⇔ Secondary
空間距離 Clearance distance	d _{CI}	_	5.5mm(MIN)	一次 ⇔ 二次間 Primary ⇔ Secondary
沿面距離 Creepage distance	d _{Cp}	_	5.5mm(MIN)	一次 ⇔ 二次間 Primary ⇔ Secondary
ケース材料 Case material		_	UL94 V-0	
比較トラッキング指数(CTI) Comparative Tracking Index; (CTI)	СТІ	V	600 (group I)	

環境及び機械的性能 ENVIRONMENTAL AND MECHANICAL CHARACTERISTICS

仕様項目 Parameters	記号	単位 Unit	規格値 Value			備考
	Symbol		MIN	TYP	MAX	Comment
動作温度範囲 *1 Ambient operating temperature	T _A	°C	-40		+105	
保存温度範囲 Ambient storage temperature	Ts	°C	-40		+105	
製品重量 Mass	m	g		60		
内部磁性体 Internal magnetic core	-	-		珪素鋼板 Silicon steel		

^{*1} インターフェースのコネクタ温度は、+105°C以内でお使いください。コネクタ単体の絶対最大定格温度は+105°Cです。
Temperature of the connector should not exceed 105°C because the absolute maximum temperature of the connector is +105°C.



仕様 SPECIFICATIONS

LA37S S05 2/5 6 2203

T_A =+25°C, RL=10k Ω , Vcc=+5V

仕様項目 Parameters		記号 Symbol	単位	規格値 Value			備考
			Unit	MIN TYP		MAX	Comment
定格電流 Primary nominal current	LA37S050S05*	I _{PN}	Α		50		
Timary nonlinar current	LA37S100S05*]			100		7
	LA37S200S05*				200		1
	LA37S300S05*				300		1
	LA37S400S05*				400		1
	LA37S500S05 *				500		1
	LA37S600S05 *				600		╡
	LA37S050S05 *	1	Α	-125		125	Vcc > 4.8V
Primary current, measuring range *1		I _{PM}	^	-250		250	Ref OUT mode
	LA37S100S05 *			-			4
	LA37S200S05 *			-500		500	4
	LA37S300S05 *			-750		750	_
	LA37S400S05 *			-1000		1000	_
	LA37S500S05 *			-1200		1200	_
	LA37S600S05 *			-1200		1200	
電源電圧 Supply voltage		Vcc	V	4.5	5.0	5.5	
消費電流	消費電流		mA		16	23	@ lp = 0A, lcc = 16 +
Consumption current 負荷抵抗		Icc					Vout / RL
Load resistance		R_L	kΩ	4.7	10		
内部リファレンス電圧 Internal reference voltage(output)		Vref1	V	2.48	2.50	2.52	Ref OUT mode
外部入力リファレンス電圧		Vref2	V	0.50		2.65	Ref IN mode
External reference input voltage リファレンスソース電流							Vref to GND. See
Reference source current		Iref	mA	0.5	0.7	1.0	"support docu" section.
リファレンスシンク電流 Reference sink current	リファレンスシンク電流 Reference sink current		mA		5	10	Vref to Vcc. See "support docu"section.
出力電圧範囲(@IPM)	出力電圧範囲(@IPM)		V	-2		2	Ref OUT mode
Output voltage range (@ I _{PM}) リファレンス内部出力抵抗		Vref	_	450		200	
Internal output resistance of Vref		Rref	Ω	150	200	200	Inside LA37SxxxS05x.
出力内部出力抵抗 Internal output resistance of Vout		Rout	Ω		2	5	Inside LA37SxxxS05x.
電気的オフセット電圧(@lp=0A) *2		Voe	mV	-5		5	Vout-Vref at Vref=2.5V
Electrical offset voltage(@lp=0A) *2 磁気的オフセット電圧				0.0		0.0	
Magnetic offset voltage		V _{OH}	mV	-3.2		3.2	$ @ 0A \rightarrow I_{PN} \rightarrow 0A $
リファレンス電圧温度ドリフト (at Ip=0 A) Temperature drift of reference voltage (at	(Ip=0 A)	Vref _⊤	mV	-10		10	@ $T_A = -40^{\circ}C \sim 105^{\circ}C$
電気的オフセット電圧温度ドリフト (at Ip=0 A)		Voe⊤	mV	-10		10	@ T _A = -40°C~105°C
Temperature drift of offset voltage (at lp= 理論感度	LA37S050S05 *	Gth	mV/A		16.00		800mV at I _{PN}
Theoretical sensitivity	LA37S100S05 *	Oui	IIIV/A		8.00		Vout = Vref + Voe
					4.00		+ (Gth × I _P)
	LA37S200S05 *						4
	LA37S300S05 *				2.67		-
	LA37S400S05 *				2.00		4
	LA37S500S05 *				1.60		4
	LA37S600S05 *				1.33		<u> </u>
感度誤差 *3 Sensitivity error		$\epsilon_{ m G}$	%	-1.0		1.0	@ I _{PN}
感度温度ドリフト		G _⊤	%	-3.0		3.0	@T _A = -40°C∼105°C
Temperature drift of sensitivity			,,,	3.0		1 5.5	1000

^{*1} 測定条件:1次導体の断面積は製品貫通穴面積と同じで、貫通1ターンとする。

Measurement condition: Primary conductor cross sectional area is as same as through hole, and penetration with 1turn in through hole.

^{*2} 電気的オフセット電圧は磁気的オフセット電圧(コアヒステリシス)除去後の値とする。 Electrical offset voltage value is after removal of magnetic offset voltage (core hysteresis).

^{*3} 工場出荷検査時の感度誤差とする。MAXとMINIは±3のの値です。 Sensitivity error is factory inspection value. MAX and MIN are values of ±3の.



仕様 SPECIFICATIONS

電流センサ関連 CURRENT SENSORS

 T_A =+25°C, RL=10k Ω , Vcc=+5V

仕様項目 Parameters		記号 Symbol	単位 Unit	規格値 Value			備考
				MIN TYP		MAX	Comment
出力直線性 Linearity error	@0A~Ipn		%	-0.5		0.5	
	@0А~Ірм	٤٤	76	-1.0		1.0	
遅延時間 (at 10% of I _{PN})*1		t _{ra}	μs			3.0	di/dt=100A/µs
Reaction time(at 10% of I _{PN}) *1		Па					
応答時間 (at 90% of I _{PN})*1 Response time (at 90% of I _{PN})*1	LA37S050S05 *	- tr	μs			4.0	di/dt=100A/μs
Response time (at 90% of I _{PN})	Others					3.5	1
周波数帯域幅 Frequency bandwidth		BW	kHz		100		@-3dB
出力ノイズ Output voltage noise	LA37S050S05*	Vno	mVpp		30		DC20MHz
calput voltage notes	LA37S100S05 *				25		
	LA37S200S05*				20		1
	LA37S300S05*				20		7
	LA37S400S05*				25		7
	LA37S500S05*				20		1
	LA37S600S05*				20		1
精度 *4 Accuracy *4	T _A =+25°C	X1	% of I _{PN}	-1.50		1.50	@ I _{PN}
, localitacy	T _A =+105°C	X2	% of I _{PN}	-5.75		5.75	1

^{*1} 測定条件:1次導体の断面積は製品貫通穴面積と同じで、貫通1ターンとする。 Measurement condition: Primary conductor cross sectional area is as same as through hole, and penetration with 1turn in through hole.

*4 精度計算式は以下の通りとする。 Accuracy formula is following

Accuracy X1 = $\epsilon_G + \epsilon_L$ Accuracy X2 = X1 + (Voe_T / 800 × 100) + G_T

適用規格 STANDARDS



 ${\sf EN62477-1:2012, EN62477-1:2012/A1:2017} \ and \ {\sf EN62477-1:2012/A11:2014}$

300V, CAT Ⅲ, PD2, Reinforced isolation, non uniform field Rated voltage

UL508, CSA C22.2 No.14-18 (UL FILE No. E243511)

Rated voltage 600V, PD2

※UL承認条件につきましては、別紙を参照願います。 ※Please refer to the another sheet about conditions of UL Recognition.

LA37S S05 4/5 6 2203

補足資料 SUPPORT DOCUMENTATION

基準電圧 Reference voltage

Refピンは、Ref OUT もしくはRef IN として使えます。

The Ref pin can be used as Ref OUT mode and/or Ref IN mode.

< Ref OUT mode >

内部リファレンス2.5Vを両極性の電流検出の基準として使用します。


The 2.5 V internal reference is used by the transducer as the reference point for bipolar measurements.

<Ref IN mode>

外部基準電圧をRefピンに接続します。外部基準電圧は0.5~2.65 Vまで供給可能です。供給した電圧は、測定時のオフセット電圧になります。 以下のグラフFig1は、外部基準電圧値Vref2変化による出力電圧(@Ip=0A)とリファレンス入出力電流を示します。

An external reference voltage is connected to the Ref pin. This voltage is specified in the range 0.5 to 2.65 V, its voltage is used as the offset voltage at the measurement.


The following graphs (Fig1) show the output voltage (@ Ip = 0A) and the reference input / output current due to the external reference voltage value Vref2.

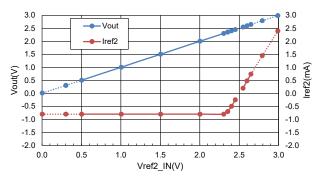

 T_A = +25 °C Vcc = +5.0 V RL = 10 k Ω

Fig 1: Vref2 input voltage vs Output voltage and Iref2 (= Vref2 current) (Typical performance)

接続図 CONNECTION

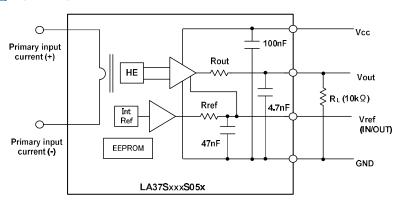

<注意 Notice >

出力ノイズを減らす目的で、十分なコンデンサを製品に内蔵しております。VoutとVref端子には外部コンデンサを付けないでください。 Sufficient capacitors are built into the product for the purpose of reducing output noise. Do not attach external capacitors to the Vout and Vref terminals.




電流センサ関連 CURRENT SENSORS


LA37S S05 5/5 6 2203

外形図 DIMENSIONS(mm)



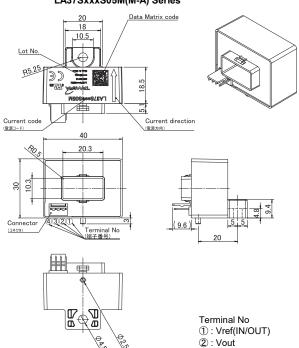

LA37SxxxS05J Series

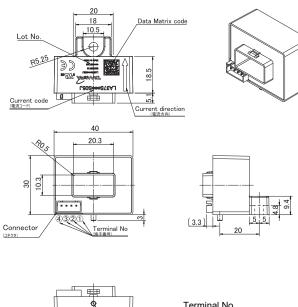

Terminal No

1 : Vref(IN/OUT)

②: Vout

③: GND 4 : +Vcc (+5 V)

Tolerance(公差): ±0.5

Unit(単位): mm

NOTE

コネクタメーカー(JST)のピン番号の付け方とは異なります。Molex製 品に合わせております。

It is different from how to put the pin numbering of connector manufacturer (JST). It is matched to the Molex type.

- ・推奨固定ネジ: M4 (平ワッシャー及びスプリングワッシャー) ・推奨締め付けトルク: < 1.5 N・m
- Recommended fastening screw type: M4 with flat washer and spring washer Recommended fastening torque: < 1.5 N·m

発注型番とコネクタ端子メッキ Order number and Connector number (terminal plating)

3 : GND

4 : +Vcc (+5 V)

Tolerance(公差): ±0.5 Unit(単位): mm

		コネクタ Connector						
型番 Types		メーカー	製品番号	旧製品番号	端子メッキ			
		Manufacturer	Part Number	Old Part Number	Plating of terminal			
LA37SxxxS05J	標準 Standard	JST	B4B-XH-A-G	_	Au			
LA37SxxxS05M	標準 Standard		22-04-1041	5045-04A	Sn			
LA37SxxxS05M-A	受注生産品 Build to Order	Molex	22-11-1041	5045-04AG	Au			

- * "xxx"は定格電流記号 Rated current (3 figures)
- * LA37SxxxS05Mシリーズの金メッキコネクタの製品は、製品名の末尾に'-A'がつきます。
- As for the LA37SxxxS05M series of a gold-plated connector, '-A' attaches to the end of the product name.

 * LA37SxxxD15Jのピン番号は、コネクタメーカー(JST)のピン番号の付け方とは異なります。Molex製品に合わせております。 The pin numbers of LA37SxxxD15J are different from those of the connector maker (JST). It is matched to the Molex type.

ご注意

Important Notice

- 1. 本書の記載内容は、改良などにより予告なく変更することがあります。 ご使用の際には、最新の情報であることをご確認下さい。
- 2. 本製品は一般的な電子機器(家電製品、事務機器、情報機器、通信端末機器、計測機器、産業機器など)への使用を意図しております。極めて高度な品質及び信頼性が要求され、その製品の故障や誤動作が人命・身体に危害を及ぼす機器、装置(医療機器、輸送機器、交通信号制御機器、火災・防犯装置、航空宇宙機器、原子力制御、燃料制御、車載機器、各種安全装置など)の特定用途に使用されることを目的として設計及び製造されたものではございません。本資料に個別に記載されている場合を除き、本特定用途に使用された場合には、お客様または第三者の損害等について当社はいかなる責任も負いかねます。
- 3. 当社は品質、信頼性の向上に努めておりますが、電流センサは ある程度の確率で機能不具合、故障の発生は避けられません。 故障の結果として、人身事故、火災事故、社会的損傷などを 発生させないよう、使用者の責任において、装置やシステム上で の十分な安全設計と確認を行って下さい。
- 4. 本書に記載されている動作例および回路例は、使用上の参考として示したもので、これらに起因する当社もしくは第三者の工業所有権、知的所有権、その他の権利の侵害問題について、当社は一切責任を負いかねます。
- 5. 本書に記載されている回路例、部品定数は、使用上の参考として示したものです。 使用者の責任において、諸条件を考慮して、設計、検証、判断を行って下さい。
- 6. 本製品は一般的な電子機器が設置される環境を意図しております。下記の例のような特殊環境下での使用を配慮した設計は行っておりませんので、このような特殊環境下で使用される場合は、使用者の責任において十分な安全性確認と信頼性確認などを行って下さい。
 - ①水、油、薬液、有機溶剤などの液体中での使用及びこれら がふりかかる場所での使用
 - ②直射日光、屋外暴露、塵埃中での使用
 - ③ 潮風、CI2、H2S、NH3、SO2、NO2 などの腐食性ガス のある場所での使用 (一部製品は耐久性をあげております)
 - ④静電気、電磁波の強い環境での使用
 - ⑤本製品に可燃物を配置しての使用
 - ⑥本製品を樹脂充填で封止、コーティングしての使用
 - ⑦フラックス洗浄で水または水溶性洗剤の使用
 - ⑧結露が発生する場所での使用
- 7. 本製品は耐放射線設計をしておりません。
- 8. 本製品または本資料に記載されている技術情報を、大量破壊兵器の開発等の目的、軍事利用の目的、あるいはその他軍事用途の目的で使用しないでください。また、本製品の移動及び技術情報の提供に関しては、「外国為替及び外国貿易法」「米国輸出管理規則」等の国内外の法令を遵守し、必要な手続きを行ってください。本製品および本資料に記載されている技術情報を国内外の法令および規則により製造、使用、販売を禁止されている製品及びシステムに使用しないでください。

- 9. 本製品の環境適合性等の詳細につきましては、製品個別に必ず 弊社営業窓口までお問合せください。本製品のご使用に際して は、特定の物質の含有・使用を規制する RoHS 指令等、適用 される環境関連法令を十分調査のうえ、かかる法令に適合するよ うにご使用ください。お客様がかかる法令を遵守しないことにより 生じたお客様または第三者の損害等について、当社はいかなる 責任も負いかねます。
- 10. お客様の転売等により本注意事項に抵触して本製品が使用され、 その使用から損害が生じた場合、当社はいかなる責任も負わず、 お客様にてご負担または補償して頂きますのでご了承ください。
- 11. 当社の書面による事前の承諾なしに、本書の全部または一部を 転載または複製することを禁じます。

ご注意

Important Notice

- The content of this information is subject to change without prior notice for the purpose of improvements, etc. Ensure that you are in possession of the most up-to-date information when using this product.
- 2. This product is intended to be used in general electronics applications (electric home appliances, business equipment, information equipment, communication terminal equipment, measuring devices, industrial equipment, and so on). This product is neither intended nor warranted for use in following equipment or devices:

Special application (such as for medical devices, transportation equipment, traffic signal control equipment, fire and crime prevention equipment, aeronautics and space devices, nuclear power control, fuel control, in-vehicle equipment, safety devices, and so on) in which extremely high quality and high reliability is required, or if the malfunction or failures of product could be cause loss of human life, bodily injury.

Tamura Corporation shall not be held responsible for any damage incurred by customers or any third party when products are used in special application, unless specifically permitted in this document.

- 3. Tamura Corporation constantly strives to improve quality and reliability, but malfunction or failures are bound to occur with some probability in current sensor. To ensure that failures do not cause accidents resulting in injury or death, fire accidents, social damage, and so on, users are to thoroughly verify the safety of their designs in devices and/or systems.
- 4. The operation examples and circuit examples shown in this information are for reference purposes only, and Tamura Corporation disclaims all responsibility for any violations of industrial property rights, intellectual property rights and any other rights owned by Tamura Corporation or third parties that these may entail.
- 5. The circuit examples and part constants listed in these specifications are provided as reference for the verification of characteristics. The user is to perform design, verification, and judgment under his or her own responsibility, taking into account the various conditions.
- 6. The products are designed for use in environments where consumer electronics are commonly used. It is not designed for use in special environments such as listed below, and if such use is considered, the user is to perform thorough safety and reliability checks under his/ her responsibility.

- 7. This product is not designed to resist radiation.
 - Use in liquids such as water, oil, chemical solutions, or organic solvents, and use in locations where the product will be exposed to such liquids.
 - Use that involves exposure to direct sunlight, outdoor exposure, or dusty conditions.
 - Use in locations where corrosive gases such as sea winds, Cl2, H2S, NH3, SO2, or NO2, are present. (Some product improves durability)
 - · Use in environments with strong static electricity or electromagnetic radiation.
 - · Use that involves placing inflammable material next to the product.
 - Use of this product either sealed with a resin filling or coated with resin.
 - · Use of water or a water soluble detergent for flux cleaning.
 - · Use in locations where condensation is liable to occur.
- 8. Do not use or otherwise make available the TAMUTA products or the technology described in this document for any military purposes, including without limitation, for the design, development, use, stockpiling or manufacturing of mass destruction weapons (e.g. nuclear, chemical, or biological weapons or missile technology products). When exporting and re-exporting the products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations including, without limitation, Japan -Foreign Exchange and Foreign Trade Control Law and U.S.- Export Administration Regulations. The TAMURA products and related technology should not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations.
- 9. Please contact your TAMURA sales office for details as to environmental matters such as the RoHS compatibility of Product. Please use TAMURA products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. TAMURA assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
- TAMURA assumes no liability for damages or losses incurred by you or third parties as a result of unauthorized use of TAMURA products.
- 11. This document and any information herein may not be reproduced in whole or in part without prior written permission from TAMURA.

Appli note 1/1 3 1709

使用上のご注意

Application notes

く共通>

- 1. センサには有極性電子部品が使用されています。接続の際、電源の極性を誤ると破損します。
- 2. 静電気、過電圧によってホール素子の不平衡電圧が増加し、オフセット電圧が変化する場合があります。取扱い及びアプリケーションでは充分にご注意ください。
- 3. ノイズの影響を防ぐため、出力線はツイスト線かシールド線をご使用することをお奨めします。
- 4. 他の機器から発生する磁界により、所定の精度が得られない場合があります。装置内のセンサ配置についてご注意下さい。
- 5. 弊社製品(一部機種を除く)は、スペックシートの測定条件(負荷条件,入力電圧)にてトリミング調整しております。従って、測定条件と異なる回路条件下では、各種特性値(オフセット、定格出力、etc.)及びその偏差が変動する可能性があります。尚、スペックシートには変動する特性項目の全てを記載しているわけではありません。
- 6. 貫通穴構造の製品は、貫通一次導体の位置により特性(定格出力、 応答性, etc.)が変動します。弊社の特性規定は、製品貫通穴と同面 積の一次導体を使用したときです。
- 7. スペックシートの定格電流は、設備の都合により直流電流にて規定しております。
- 8. コネクタ接続型の製品は、勘合部分の端子メッキが同じものをご使用下さい。勘合部分のメッキが異金属の場合、ガルバニック腐食により不具合が発生する可能性があります。
- 9. 高温高湿の環境下での保存は避けて下さい。6ヶ月以上保管される場合、はんだ付け性をご確認の上ご使用願います。(基板にはんだ付けする製品)
- 10.起動毎にオフセット電圧を基準値として読み込み、ゼロ点調整することを推奨します。また、数ヶ月間の連続運転や使用環境の温度/湿度の変動が大きいことが想定される製品につきましては、アイドリング時(電流が流れていないことが明らかな場合)に定期的なゼロ点調整を推奨します。
- 11.保護回路(素子、ヒューズ等)は内蔵しておりません。センサの故障 モードとして短絡や開放状態等があり、短絡状態の場合には内部部 品の異常温度上昇が考えられ発煙や発火につながる恐れがござい ます。安全上、重要な部分にご使用される場合には、保護素子や保 護回路などにより適切な措置を行ってください。尚、磁気平衡式及び フラックスゲート方式(磁気平衡型)センサについては、計測電流に 比例して2次側電源の消費電流が増減します。

<磁気比例式>

- 1. 被測定電流の周波数が高い場合には、コア材の鉄損によりコアの 発熱が大きくなり、内部回路が破損する可能性があります。 その場合には、測定電流よりも定格電流が大きい製品を使用される か、磁性体としてフェライト材料を使用している機種を選定して下さい。
- 2. 被測定電流が定格電流を超えると鉄芯の飽和により、被測定電流に比例した出力電圧が得られないことがあります。

<磁気平衡式>

- 1. 磁気平衡方式製品(Sシリーズ)の両電源製品は、正負の両電源電圧を同時対称に印加して下さい。同時印加されない場合には、オフセット誤差が増えます。
- 2. 最大電流について通電時間制限があります。この時間を超えてご使用された場合、内部回路が破損する可能性があります。
- 3. 電流出力タイプに接続する負荷抵抗は、ご希望の出力電圧範囲にあうように精度及び温度特性の良い抵抗をご使用下さい。
- 4. 2次側電源の消費電流は、被測定電流Ifに比例して増減します(If÷ KN, KN:2次側巻数)。2次側電源の電流能力は十分に持たせて下さい。

<フラックスゲート方式(磁気平衡型)>

- 1.2次側電源の消費電流は、被測定電流に比例して増減します。2次側電源の電流能力は十分に持たせて下さい。
- 2. 出力電圧、リファレンス電圧には約450kHzのリップルが含まれておりますので、必要応じて外付けコンデンサを追加して下さい。

<General Considerations>

- 1. The sensor uses polar electronic components. When the polarity of the power supply is mistaken, the sensor is damaged.
- Static electricity or excessive voltage can increase an offset voltage in the Hall element, and cause offset voltage to change. Please exercise care in handling and application.
- In order to prevent the influence of noise, the use of twisted cable or shielded cable for the output line is recommended
- If using this device within a magnetic field generated by other devices, the specified accuracy may not be obtainable.
- 5. Our products (several models are excluded) are adjusted with the trimming method by the measurement condition (Load resistance, Power supply voltage) of specification sheets. Therefore, characteristics (Offset, Output, etc.) and its deviation may be changed in different circuit conditions from the measurement condition. All change characteristic items are not indicated on specification sheets.
- The performance of current sensors with through-hole (aperture) is dependent on the position of the primary conductor. Tamura specifications are based on a primary conductor completely filling the through-hole (aperture) area.
- 7. The current sensor rated current in DC Amps.
- 8. Please use mating connector with equivalent terminal plating material to insure proper operation and avoid possibility of 'galvanic corrosion'.
- Please do not store in high-temperature and high-humidity storage environment. Please use it after confirming soldering when it is kept for six months or more. (product soldered with substrate)
- 10.We recommend performing a zero offset adjustment by measuring the offset voltage at startup. In continuously operation for a few months, or at change of ambient temperature or humidity is large, we recommend regularly performing a zero offset adjustment at being idling (it is clear that the current is not apply).
- 11.The current sensor doesn't have built-in protection circuit (devices and fuses, etc.). As a failure mode of the sensor, there is a short circuit and open state. In the case of a short-circuit state, the abnormal temperature rise of the internal parts is assumed, and there is a possibility to smoke and to ignite. If it is used in safety critical circuit blocks, please take appropriate measures by protection devices, protection circuits, etc. For closed loop –type sensors and flux gate (closed loop type) sensors, the consumption current of the secondary power supply varies in proportion to the measurement current.

<Open loop>

- High frequency primary current may result in excessive heating in iron magnetic core and cause damage to internal circuitry; for high frequency applications select current sensor with ferrite core material.
- If the measured current exceeds the rated current, magnetic core saturation will occur and the output voltage signal will not be linearly proportional to the measured current.

<Closed Loop>

- For closed loop current sensors please insure the power supply voltage is balanced, symmetrical, and, applied simultaneously to avoid potential increase in DC offset error.
- Maximum rated current measurement duration is time-dependent. Maximum rated current applied in excess of the time limit can result in damage to internal electronic circuitry; please consult Tamura for assistance.
- When using a measurement resistor to convert current output to voltage output select a resistor with stable temperature characteristic to insure accuracy of the output voltage.
- 4. Compensation current supplied to the secondary winding varies in proportion to the measured current based on the conversion ratio. (If/KN; KN = secondary turns) Please insure the PSU has required current capacity to supply compensation current to the secondary winding.

<Flux-Gate>

- Compensation current supplied to the secondary winding varies in proportion to the measured current. Please insure the PSU has required current capacity to supply compensation current to the secondary winding.
- There is 450kHz ripple voltage present on the output and reference output voltage signals. An external capacitor maybe added if necessary.